



## INSTRUCTIONS

# BELT LOOP ANCHOR

**CODE**  
↳101366

**MAX LOAD**  
↳3KG / 6.6LBS

**NLG ID**  
Scan the orange tags on compatible NLG products to access detailed product info, certification and installation videos.

**NOTE**  
Max weight of tools attached to loop = 3kg  
Multiple belt loops can be attached on one belt.

01



Open up the Belt Loop.

02



Pass a belt through the open loop with the logo on the outside and the D-ring at the bottom.

03



Position Belt Loop in preferred position along the belt.